


Using The Remote Control

Use the Scientific Atlanta UJ3EXP86X to operate the Explorer® 2200, TV and VCR. Your remote control may be slightly different from the one shown here. The remote control must be programmed for use. If your installer did not program your remote control, refer to the remote control instruction guide that came with the remote.

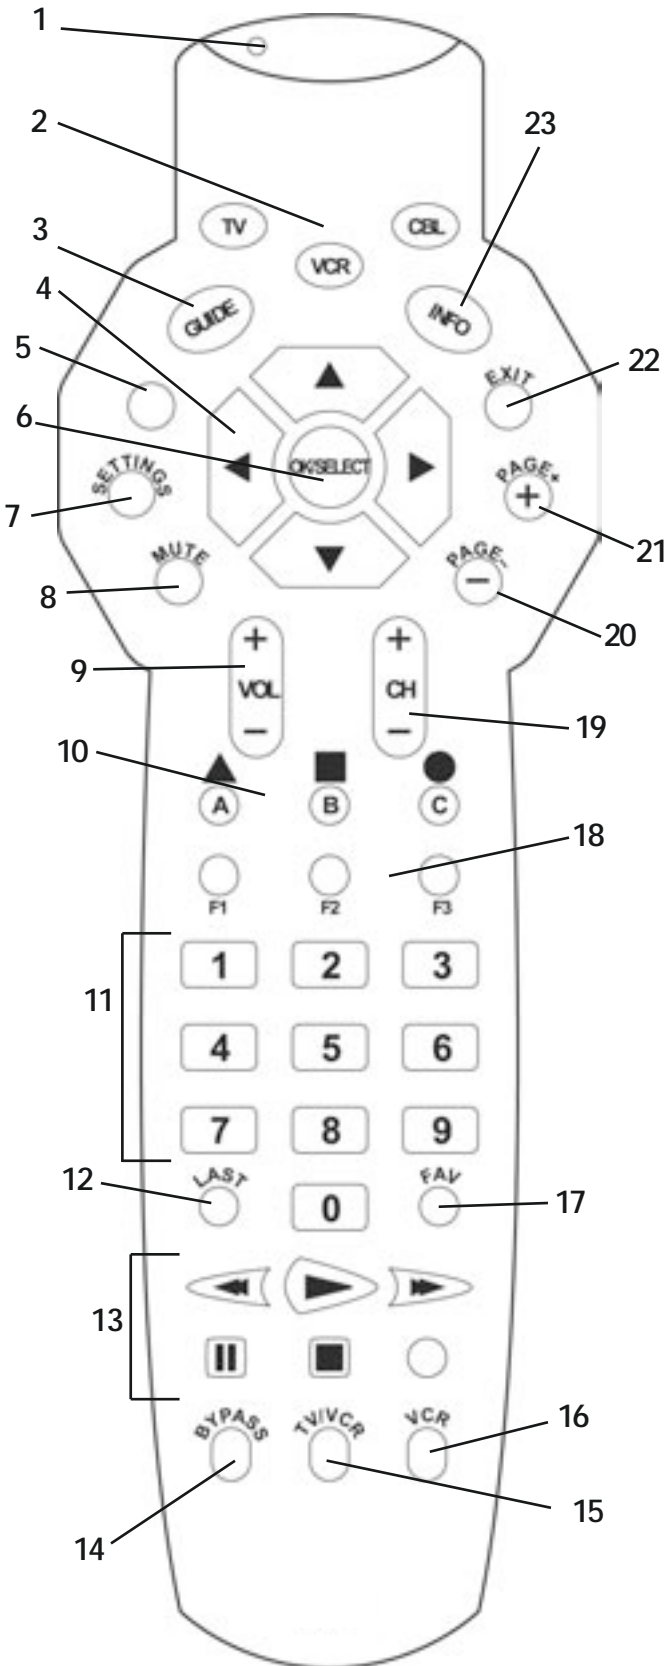

Key	Item	Description
1	LED	Indicates remote control activity
2	DEVICE KEYS (TV, VCR, CBL)	Allow you to turn on and off your TV, VCR, and CABLE box. They are also used to setup the remote control
3	GUIDE	Displays the program guide
4	FOUR-WAY CURSOR KEYS	Allow you to navigate through the on-screen menus
5	PPV*	Allows you to access Pay-Per-View menus (8600X only)
6	SELECT	Chooses the highlighted item on the menu
7	SETTINGS	Displays current cable box settings
8	MUTE	Turns volume off
9	VOL + / -	Turns the volume up and down
10	A, B, C KEYS	Perform various functions. Refer to the bottom of your screen for current operation
11	NUMBER KEYS	Allow direct access to specific channels set by your cable provider
12	LAST	Recalls the last channel that was reviewed
13	VCR/DVD KEYS	Perform standard VCR and DVD functions when in VCR mode. See the "VCR Keys" section below
14	BYPASS	Switches between the cable box and TV
15	TV/VCR	Switches the VCR between TV and VCR mode
16	VCR/VOD	Switches between VCR and Video on Demand — currently not available
17	FAV	Steps through favorite channels
18	F1, F2, F3	Macro keys that allow quick access to specific channels set by your cable provider — currently not available
19	CH + / -	Changes the channel up and down
20	PAGE -	Moves the menu backward one page
21	PAGE +	Moves the menu forward one page
22	EXIT	Exits out of on-screen menus
23	INFO	Displays channel and program information

*On the Explorer 2200, Pay-Per-View options are accessed through the on-screen menu.

VCR/DVD Keys

