

VCR Codes

Action	0317	Go Video	0232, 0279, 0350, 0432, 0526
Admiral	0048	GoldStar	0037, 0038, 0018, 0471, 0480
Adventura	0000	Gradiente	0000, 0008, 0408
Aiko	0278	Grundig	0195
Aiwa	0037, 0000, 0307, 0468	HI-Q	0047
Akai	0041, 0049, 0053, 0061, 0106, 0156, 0242	Harley Davidson	0000
American High	0035	Harman/Kardon	0081, 0038, 0075
Asha	0240	Harwood	0072, 0068
Audiovox	0037	Headquarter	0046
Beaumarck	0240	Hitachi	0000, 0042, 0041, 0065, 0082, 0105, 0166, 0292, 0396
Bell & Howell	0104	JVC	0067, 0041, 0008, 0206, 0207, 0384
Broksonic	0184, 0121, 0209, 0002, 0211, 0295, 0361, 0479	Jensen	0041
CCE	0072, 0278	KEC	0037, 0278
Calix	0037	KLH	0072
Canon	0035, 0102, 0167	Kenwood	0067, 0041, 0038, 0384
Capehart	0020	Kodak	0035, 0037
Carver	0081	LXI	0037
Cineral	0278	Lloyd's	0000, 0208
Citizen	0037, 0278	Logik	0072
Colt	0072	MEI	0035
Craig	0037, 0047, 0240, 0072, 0271	MGA	0240, 0043, 0061
Curtis Mathes	0060, 0035, 0041, 0162	MGN Technology	0240
Cybernex	0240, 0051	MTC	0240, 0000
Daewoo	0045, 0278, 0017, 0020, 0087, 0561	Magnasonic	0278
Daytron	0020	Magnavox	0035, 0039, 0081, 0000, 0149, 0103, 0110
Denon	0042	Magnin	0240
Dynatech	0000	Marantz	0035, 0081
Electrohome	0037	Marta	0037
Electroponic	0037	Matsushita	0035, 0162, 0454
Emerex	0032	Memorex	0035, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0162, 0046, 0299, 0307
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 0036, 0061, 0068, 0088, 0208, 0211, 0212, 0294, 0295, 0361, 0479, 0510, 0561	Minolta	0042, 0105
Fisher	0047, 0104, 0054, 0066	Mitsubishi	0048, 0067, 0043, 0061, 0075, 0173, 0214, 0242, 0443
Fuji	0035, 0033	Motorola	0035, 0048
Funai	0000	Multitech	0000, 0072
GE	0060, 0035, 0048, 0240, 0065, 0202	NAD	0058
Garrard	0000	NEC	0104, 0067, 0041, 0038, 0040, 0050, 0082
		Nikko	0037
		Nikon	0034, 0253
		Noblex	0240

Olympus	0035, 0226	Sanyo	0047, 0240, 0104, 0046
Optimus	0037, 0048, 0104, 0162, 0058, 0432, 0454	Scott	0184, 0045, 0121, 0043, 0210, 0211, 0212
Optonica	0062	Sears	0035, 0037, 0047, 0000, 0042, 0104, 0046, 0054, 0057, 0066, 0105
Orion	0184, 0002, 0295, 0479	Semp	0045
Panasonic	0035, 0162, 0077, 0102, 0225, 0226, 0227, 0246, 0378, 0454	Sharp	0048, 0062
Penney	0035, 0037, 0240, 0042, 0038, 0040, 0054	Shintom	0072
Pentax	0042, 0065, 0105	Shogun	0240, 0051
Philco	0035, 0209, 0479	Singer	0072
Philips	0035, 0081, 0062, 0110, 0403	Sony	0035, 0032, 0000, 0033, 0034, 0011, 0253
Pilot	0037	Sunpack	0253
Pioneer	0067, 0058, 0168	Sylvania	0035, 0081, 0000, 0043, 0103, 0110
Portland	0020	Symphonic	0000
Profitronic	0240	TMK	0240, 0036, 0208
Proscan	0060, 0202	Tatung	0041
Protec	0072	Teac	0000, 0041
Pulsar	0039, 0051	Technics	0035, 0162, 0246
Quarter	0046	Teknika	0035, 0037, 0000, 0052
Quartz	0046, 0155	Thomas	0000
Quasar	0035, 0162, 0077, 0454	Toshiba	0045, 0043, 0057, 0066, 0210, 0212, 0366
RCA	0060, 0035, 0048, 0240, 0042, 0149, 0065, 0077, 0105, 0106, 0202, 0277	Totevision	0037, 0240
Radio Shack	0000	Unitech	0240
Radix	0037	Vector	0045
Randex	0037	Vector Research	0038, 0040
Realistic	0035, 0037, 0048, 0047, 0000, 0104, 0062, 0046, 0066	Video Concepts	0045, 0040, 0061, 0221
Ricoh	0034, 0253	Videosonic	0240
Runco	0039	Wards	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0072, 0149, 0062, 0212
STS	0042	White	
Salora	0075	Westinghouse	0278
Samsung	0240, 0045, 0051, 0053	XR-1000	0035, 0000, 0072
Sanky	0048, 0039	Yamaha	0038
Sansui	0000, 0067, 0041, 0082, 0271, 0479	Zenith	0039, 0000, 0033, 0034